



BIOS Setup					
Main	Advanced	Security	Boot	Exit	
Screen Logo Display [Enabled] Booting By LAN [Enabled] [F5] Set Boot Order				Item Specific Help Select boot priority of Boot device	
F1	Help	↑↓	Select Item	F5/F6	Change Values
Esc	Exit	↔	Select Menu	Enter	Select [F5] Sub-Menu
F9	Setup Default			F10	Save and Exit

BIOS Setup					
Main	Advanced	Security	Boot	Exit	
Set Boot Order				Item Specific Help	
Boot Priority order : 1: IDE 0: WDC WD1600YS-18SHB1 2: USB HDD: BMKT MemoRive_M3-(USB) 3: ALL USB Floppy 4: ALL IDE HDD 5: ALL USB HDD 6: ALL PCI BEV 7: ALL IDE CDROM 8: Excluded from boot order : : IDE CD: TSSTcorpDVD-ROM TS-H352C : ALL USB KEY : ALL USB CDROM : ALL USB ZIP : ALL USB LS120				Keys used to view or configure devices: Up and Down arrows select a device. <F5> and <F6> moves the device up or down. <x> exclude or include the device to boot.	
F1	Help	↑↓	Select Item	F5/F6	Change Values
Esc	Exit	↔	Select Menu	Enter	Select [F5] Sub-Menu
F9	Setup Default			F10	Save and Exit

BIOS Setup					
Main	Advanced	Security	Boot	Exit	
Set Boot Order			Item Specific Help		
Boot Priority order : 1: USB HDD: BMKT MemoRive_M3-(USB) 2: IDE 0: WDC WD1600YS-18SHB1 3: ALL USB Floppy 4: ALL IDE HDD 5: ALL USB HDD 6: ALL PCI BEV 7: ALL IDE CDROM 8: Excluded from boot order : : IDE CD: TSSTcorpDVD-ROM TS-H352C : ALL USB KEY : ALL USB CDROM : ALL USB ZIP : ALL USB LS120			Keys used to view or configure devices: Up and Down arrows select a device. <F5> and <F6> moves the device up or down. <x> exclude or include the device to boot.		
F1	Help	↑↓	Select Item	F5/F6	Change Values
Esc	Exit	↔	Select Menu	Enter	Select  Sub-Menu
F9	Setup Default		F10	Save and Exit	

BIOS Setup											
Main	Advanced	Security	Boot	Exit							
Set Boot Order			Item Specific Help								
Boot Priority order : 1: USB HDD: BMKT MemoRive_M3-(USB) 2: IDE 0: WDC WD1600YS-18SHB1 3: ALL USB I 4: ALL IDE H 5: ALL USB I 6: ALL PCI B 7: ALL IDE C 8: Excluded from bo : IDE CD: TSS : ALL USB KEY : ALL USB CDROM : ALL USB ZIP : ALL USB LS120			Keys used to view or configure devices: Up and Down arrows select a device. <F5> and <F6> moves the device up or down. <x> exclude or include the device to boot.								
<table border="1"> <tr> <td colspan="2">Setup Confirmation</td> </tr> <tr> <td colspan="2">Save configuration changes and exit now?</td> </tr> <tr> <td><input checked="" type="checkbox"/> [Yes]</td> <td><input type="checkbox"/> [No]</td> </tr> </table>						Setup Confirmation		Save configuration changes and exit now?		<input checked="" type="checkbox"/> [Yes]	<input type="checkbox"/> [No]
Setup Confirmation											
Save configuration changes and exit now?											
<input checked="" type="checkbox"/> [Yes]	<input type="checkbox"/> [No]										
F1	Help	↑↓	Select Item	F5/F6	Change Values						
Esc	Exit	↔	Select Menu	Enter	Select  Sub-Menu						
F9	Setup Default		F10	Save and Exit							